

AnteRoom Expander Installation

Applicable to HCAR3618, HCAR4818, HCAR4818DD, AR36, AR48, and ARDD

Expanders increase the overall depth of the HEPACART prefabricated AnteRoom. Expanders are available for both HCAR36 and HCAR48 product lines in depths of 12" and 24". Expanders can be stacked to any depth desired.

1. PREPARATION

Place AnteRoom and expander in close proximity and remove plastic plugs from AnteRoom and the pre-installed fasteners on the expander module. See Figure 1.



Figure 1

2. ATTACH EXPANDER

Supplies Required: (12) 1/4-20 Truss Head Screws, (12) 1/4-20 Thumb Nuts

With couplers facing the AnteRoom tilt expander module back and connect expander floor frame to AnteRoom floor frame. Ensure that the slot on the bottom of the expander hooks onto the angle bracket on the AnteRoom. See Figure 2

Replace (12) 1/4-20 screws and thumb nuts removed in Step 1 this time using them to attach to the AnteRoom.

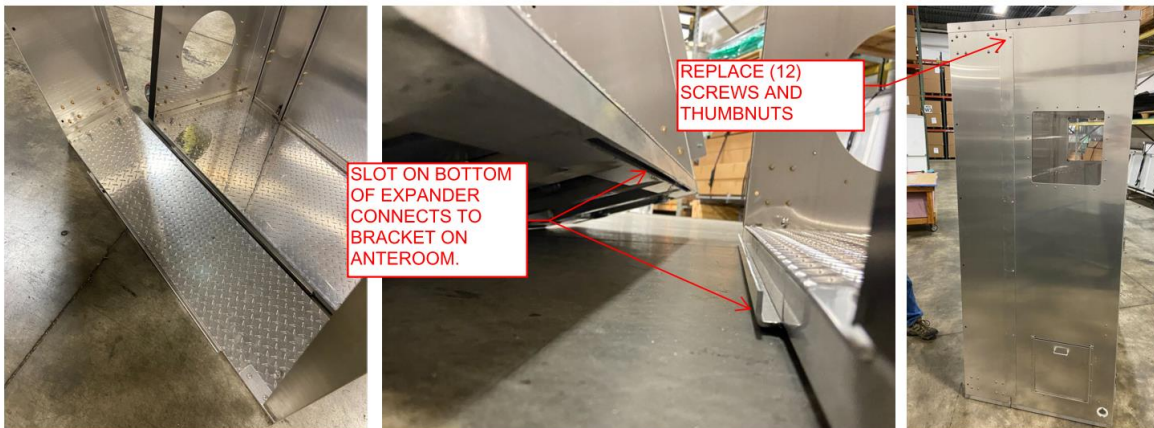


Figure 2

3. RELOCATE CASTERS

Supplies Required: #3 Phillips bit and driver

Remove the right most casters from the top and bottom of the right hand side of the AnteRoom and relocate them to the right most holes on the expander. Use screws removed from the expander module to fill in holes left by removing casters from the AnteRoom.

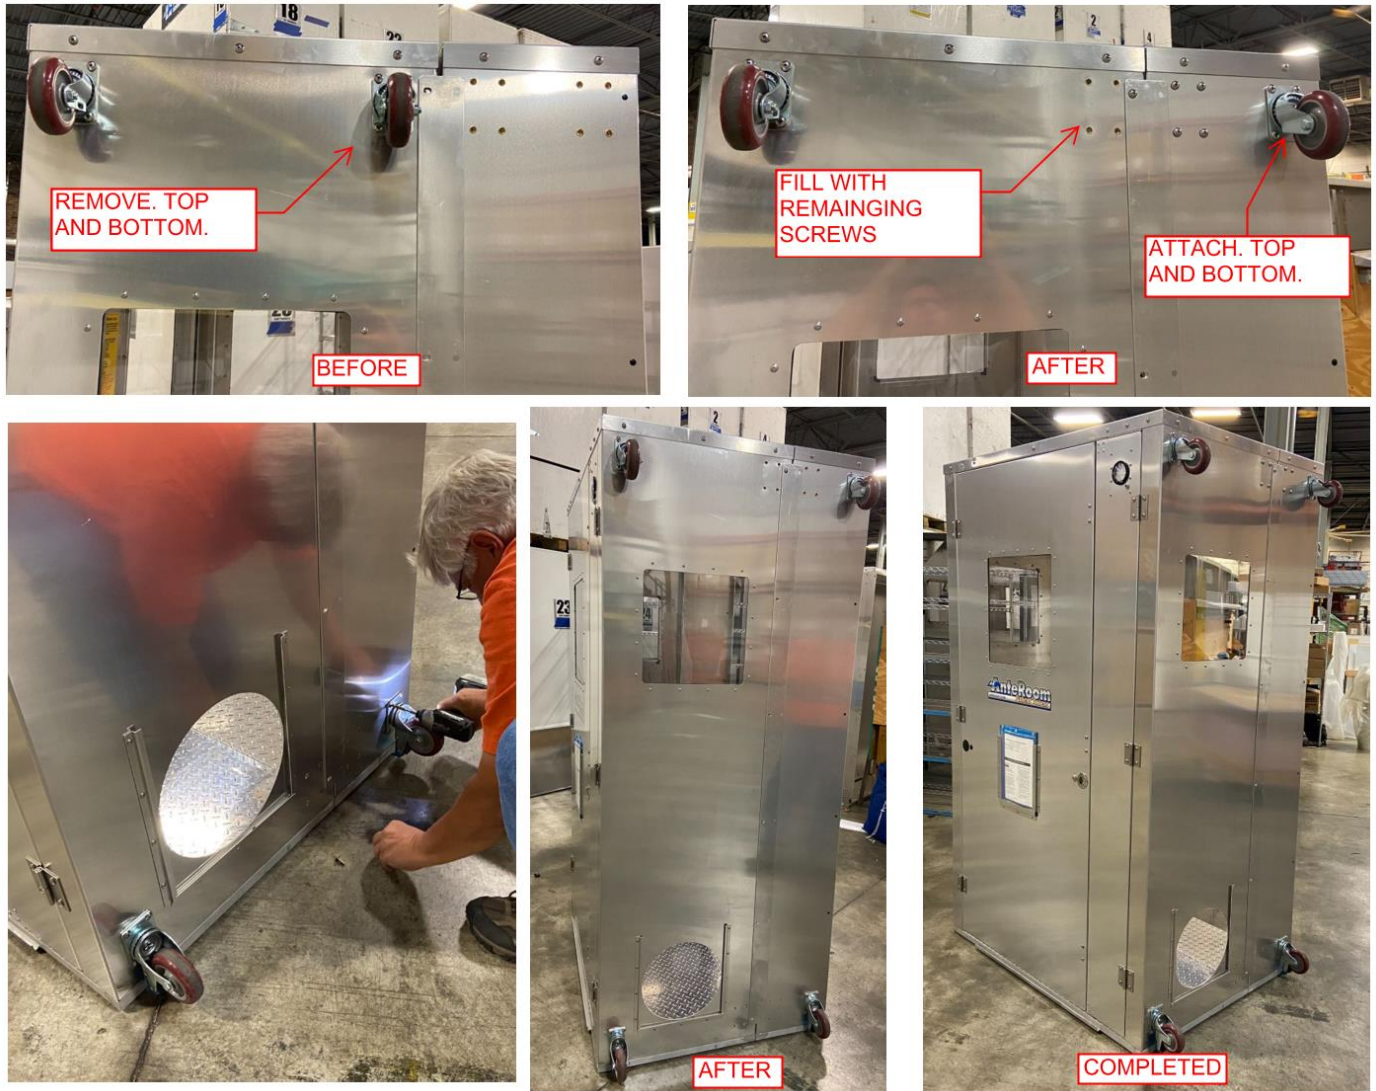


Figure 3

Installation of the expander module is now complete. Relocate AnteRoom to desired location and begin use.