


CAP Brush Replacement


Applicable to CAP Classic (CAP), CAP Vision (CAP-W), CAP Metric (CAP-M) and CAP Fiber (CAP-L)

1. REMOVE OLD BRUSHES

Remove the four rollers by pressing the axle in until it clears the bracket. Note: The axels only push one direction. If they do not move, push on the other side.

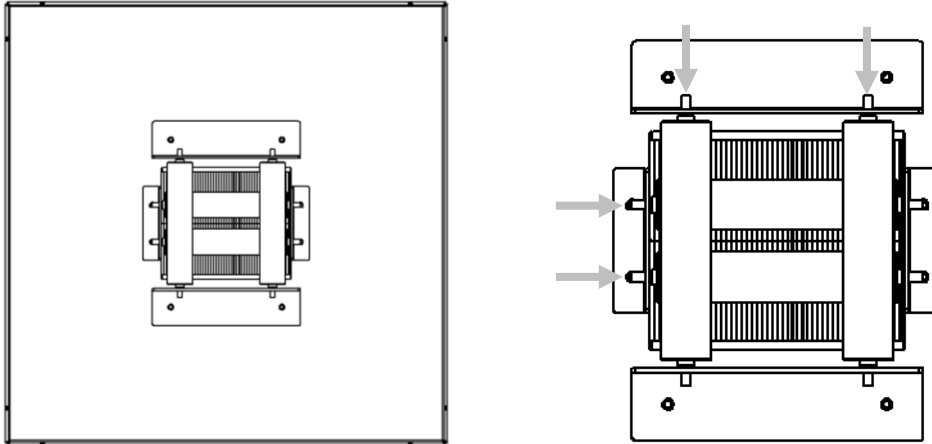

Using a 3/16" or 5mm drill bit, from the front face drill through each of the rivets securing the brushes. The number of rivets will vary based upon your exact model of CAP product. The rivets to remove are highlighted below, and run along the long edge of the brush opening.

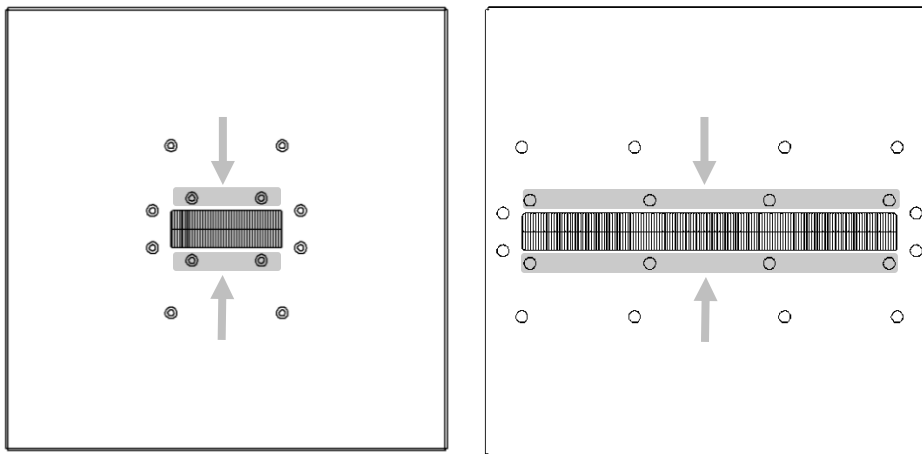

2. INSTALL NEW BRUSHES

Install new brushes in the reverse of step 1. Begin by installing the two brushes with the supplied screws and nuts using a Phillips #2 screwdriver and an 11/32" wrench.

Reinstall the two inner rollers followed by the two outer rollers. Ensure the rollers spin freely.

Your CAP product is ready to be used.