


AnteRoom Non-Metallic Door Frame Adapter Kit

Applicable for adapter kit part number HCAR4818-MMFK.UK

Non-Metallic Adapter Kit and AnteRoom can be installed by one person. Metallic adapters can be removed and relocated to another doorway; requires a new loop lock adhesive kit.

Not Included with the Kit: Rag, Isopropyl Alcohol

ITEM NO.	DESCRIPTION	QTY.
1	VERTICAL METALLIC ADAPTER	2
2	HORIZONTAL METALLIC ADAPTER	1
3	LOOP LOCK ADHESIVE KIT	1

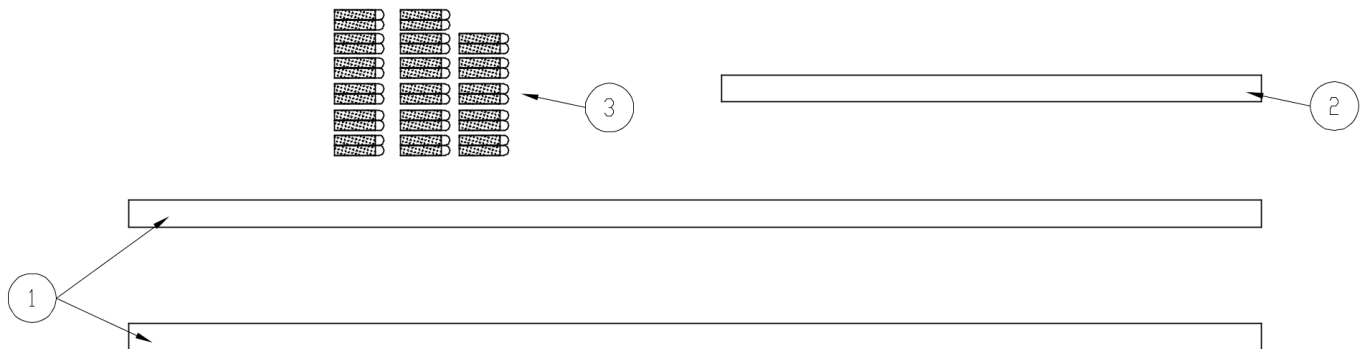

1. PREPARE LOOP LOCK KIT AND METALIC ADAPTERS

Supplies Required: (2) Vertical Metallic Adapter, (1) Horizontal Metallic Adapter, (1) Loop Lock Adhesive Kit

Prepare Loop Lock adhesive strips.

1. Separate loop lock adhesive strips into pairs.
2. Fold loop lock adhesive strip onto itself and press firmly to engage loop locking mechanism. Figure 1
3. Repeat for all pairs in the kit.

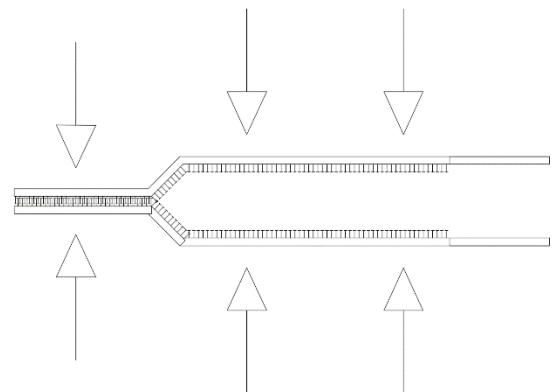


Figure 1

Lay Vertical Metallic Adapters and Horizontal Metallic adapters out on the floor.

Remove adhesive backer from one side of the loop lock pair and place (5) strips on each Vertical Metallic Adapter and (4) strips on the Horizontal Adapter. Figure 2

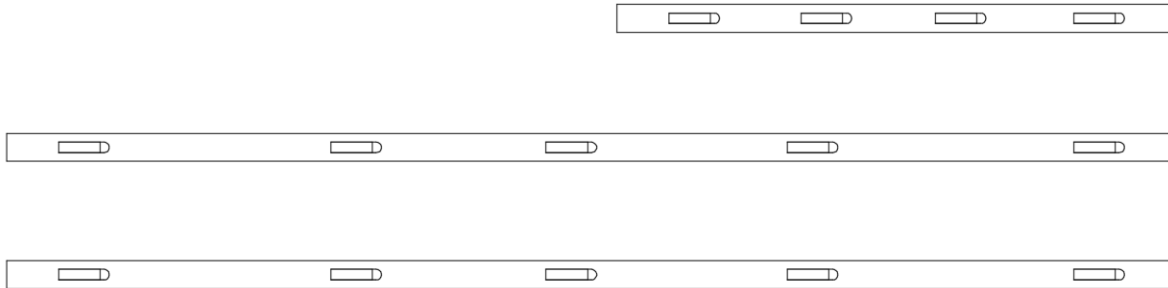


Figure 2

Firmly press and hold each strip in place for 10-30 seconds to ensure a good bond.

2. DOOR FRAME INSTALLATION

Supplies Required: Rag, Isopropyl Alcohol

Clean front face of door frame with rag and isopropyle alcohol.

Mount Metallic Adapter.

1. Peel adhesive backer off of the loop lock strips on one Metallic Adapter.
2. Align the metallic adapter with the corresponding face of the door frame and firmly press in place. Hold for 10-30 seconds to ensure a good bond. Be sure to apply pressure over each adhesive strip.
3. Repeat with remaining adapters. It is recommended to start with the two vertical frame sections and then place the top piece.

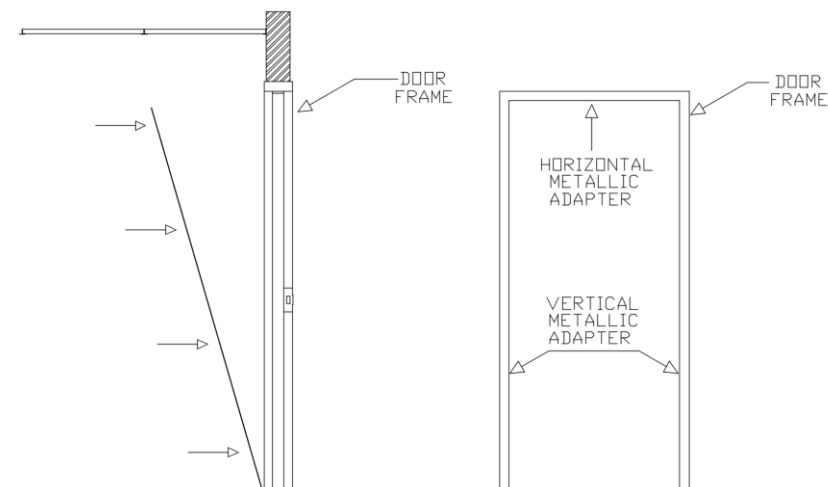


Figure 3

3. USE AND REMOVAL

Follow the sequence of operation in the owners manual provided with your AnteRoom to set up your AnteRoom on the door frame with metallic strips.

Removal

1. Beginning at one end of the metallic strip pull the adapter away from the door frame. The loop lock system should disengage leaving the adhesive strips behind on the door frame.
2. Pull down on the tab at the bottom of the loop lock strip to remove the strips from the door frame.
3. Proper removal of the adhesive should leave the surface clean and free of residue. If there is some residue remaining on the surface clean with rag and isopropyl alcohol.

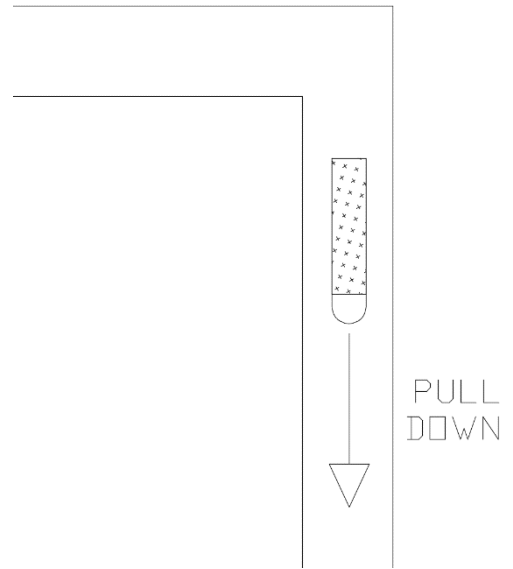


Figure 4