


CAP CORNER INSTALLATION GUIDE

SETUP AND TOOL REQUIREMENTS


The CAP CORNER is completely toolless with the exception of a ladder to reach above ceiling grid. There is zero prep time for the CAP CORNER, it comes out of the box ready for installation.

CAP CORNER INSTALLATION SEQUENCE

1. At the corner that needs to be traversed, locate a ceiling tile that is in line with the tile wire has been fed through. While tile alignment is not mandatory, it will improve pull performance. Remove this tile following worksite containment requirements.
2. The CAP CORNER is then installed into the 2' x 2' grid with the flanged bends facing up, and the flat surface with labeling facing down. Rotate the device so that the 90-degree turn will face the old and the new desired direction of wire travel.
3. In the open tile-space adjacent to the CAP Corner (or after removing another adjacent tile in a 2' x 2' grid) position yourself so that you can look down over the installed unit. Remove the two quick-release pins by simply pulling them out by their handles. They are spring loaded and can be inserted and removed without any tools or button mechanisms. Once the pins are removed, loop your wire bundle over the top and into the curved low-friction channel. Reconnect the pins to prevent the wire from escaping the channel.
Alternatively, you can thread the wire through the channel without removing the pins if desired.
4. Return the adjacent tile that was made vacant in Step 3. In a 2' x 4' grid consider utilizing a CAP Extend to fill the tile vacancy and prevent dust and pathogen transmission from above grid to the space. Once the wire has been threaded, and the pins secured, the wire is ready to be pulled and normal installation is resumed. The CAP Corner removes the need to pull a loop at said corner and can remain in the ceiling as long as required for the pull to complete.
5. After installation is complete, remove the two quick-release pins and remove the wire from the unit and secure as desired. Remove CAP Corner from ceiling grid and replace ceiling tile.

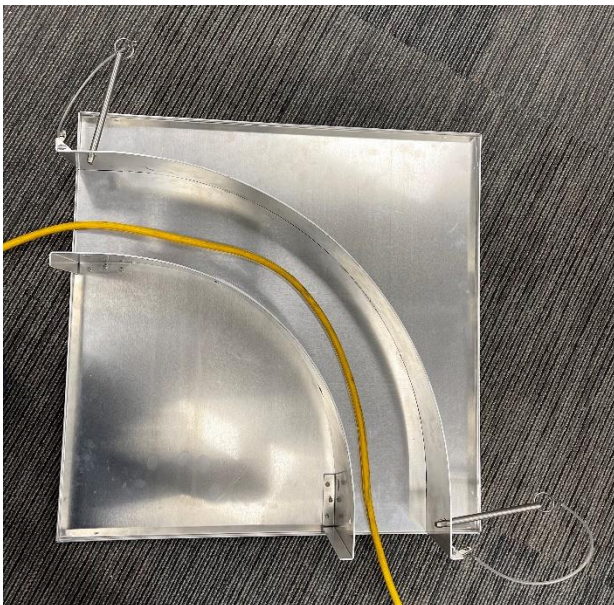

QC-Pins Removed. Place/Remove wire in the loop

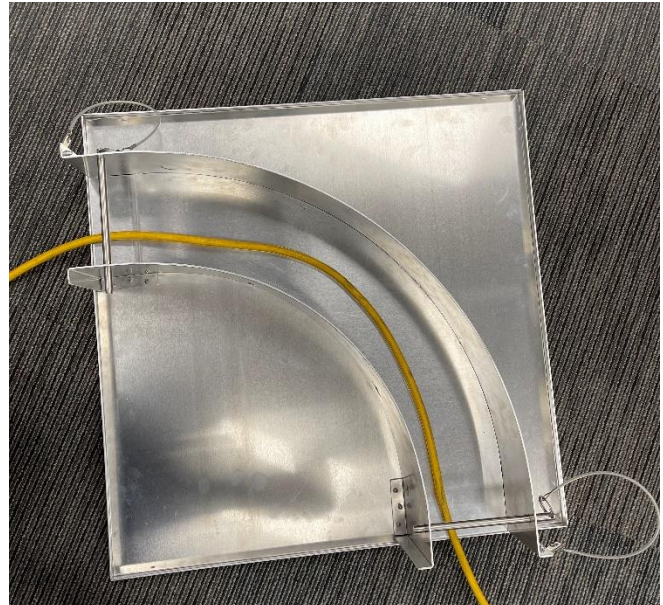

QC-Pins connected. Wire ready for pull.